

Maschinepistole 40

User's Manual



Warning:
For Age 18 and older
Read manual before use

注意事項

警告 本玩具為無法改造成為有殺傷力之玩具槍，請勿嘗試改造以免損壞內部精密機構

警告 此玩具槍有可能讓警方或民眾誤以為真槍，導致危險或恐慌，請勿除去或修改槍上之標記。

警告 請勿在任何的公共場所把玩，展示，射擊，或任何導致一般民眾恐慌之行為上述行為有可能違反社會秩序維護法

警告 請勿對標靶以外之人體，動物，射擊，以免造成受傷或損害物品遭受刑責處分

PRODUCT ADVISORY



WARNING! Do not change, obscure, alter, remove, or obliterate any coloration or markings on this gun. The coloration and/or markings on this product, including the blaze orange barrel tip are designed to comply with applicable state and federal law and regulations.

WARNING! This product may be mistaken for a firearm by law enforcement officers or others. Any person who changes, alters, removes, or obliterate any coloration or markings that are required by state or federal law or regulation, in any way that makes this product look more like a firearm is guilty of a misdemeanor.


WARNING! The open display, brandishing and/or exposing of this product in any "public place" may cause confusion and may be a crime. The term "public place" means any area opened to the public, including but not limited to, streets, sidewalks, bridges, alleys, plazas, parks, driveways, front yards, parking lots, automobiles, whether moving or not, and buildings opened to the general public including those that serve food or drink, or provide entertainment, and the doorways and entrances to buildings or dwellings.

WARNING! Every person who, except in self-defense, draws or exhibits this product in a threatening manner against another in such a way as to cause a reasonable person apprehension or fear of bodily harm is guilty of a misdemeanor punishable by imprisonment in the county jail for a term of not less than 30 days.


槍枝結構 COMPONENT

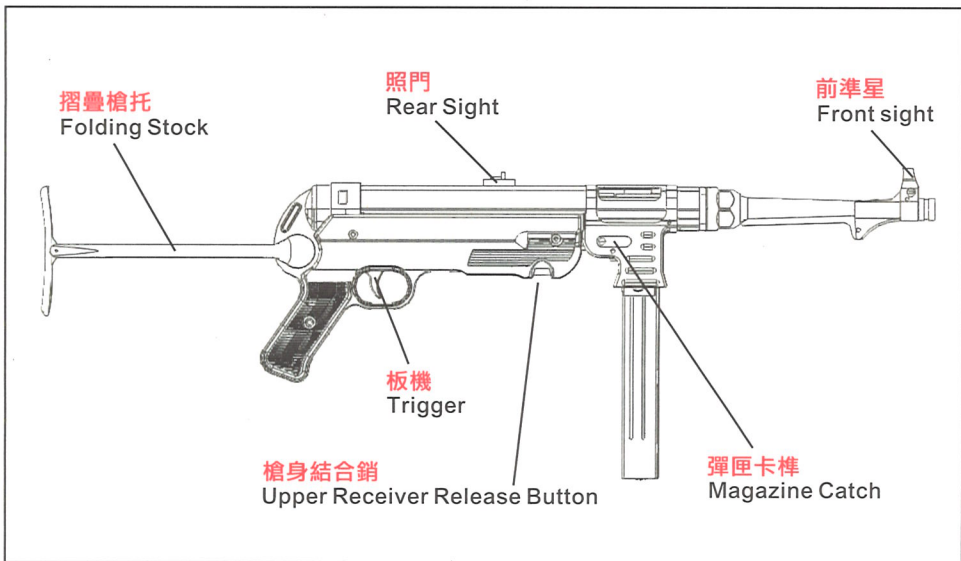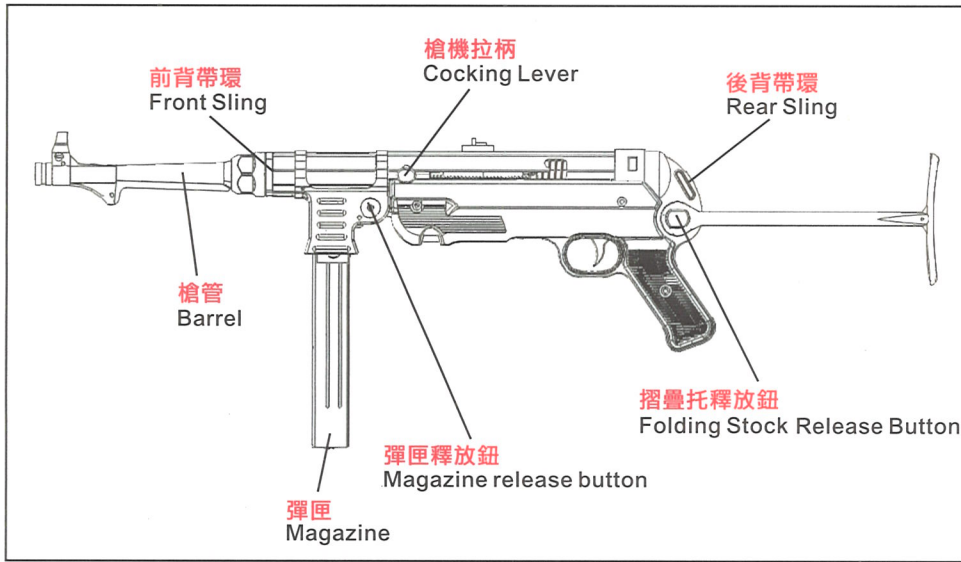


電池安裝 INSERT BATTERY

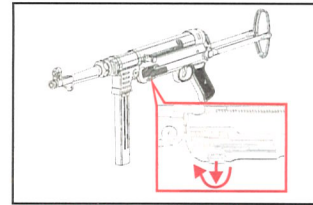

拉開槍身結合銷,旋轉180度,並將槍身往前抽出
Pull the "Receiver release button" and rotate 180°, Then you can disassemble the upper receiver

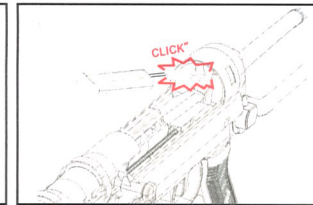


連接電池並將電池妥善放置
Connect the wire, and put the battery inside.

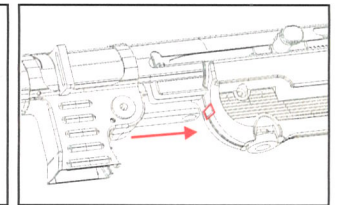


裝回槍身並180度旋轉結合銷,結合銷將會自動固定
Put the upper receiver back, rotate the button, and it will lock automatically!




彈匣操作 MAGAZINE OPERATION

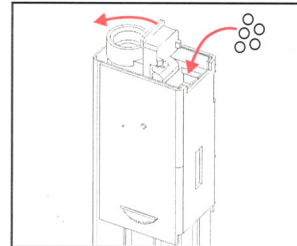

將彈倉蓋向上掀開並倒入BB彈
Open the cover of magazine and Insert BBs in to the magazine

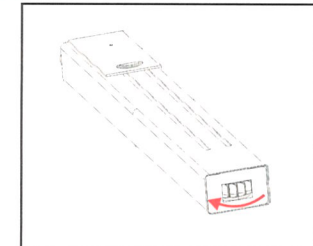


依箭頭方向將發條上緊
Turn the gear at the bottom until heard click sound

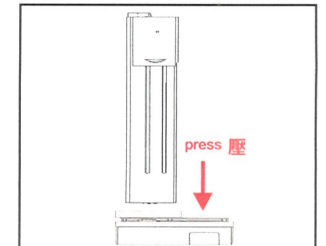


使用SRC快速撥彈器更輕鬆有效
Use SRC Mr. ROLL UP can charge the magazine fast and easily

裝卸彈匣 LOAD AND RELOAD

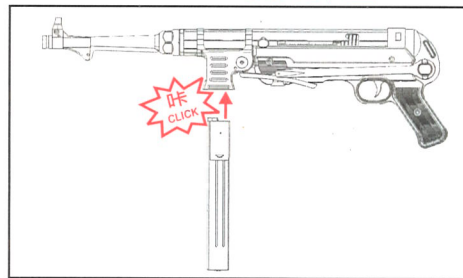


如圖將彈匣插入直到聽到“喀”聲
Insert the magazine as picture shows until the "Click" sound is heard.

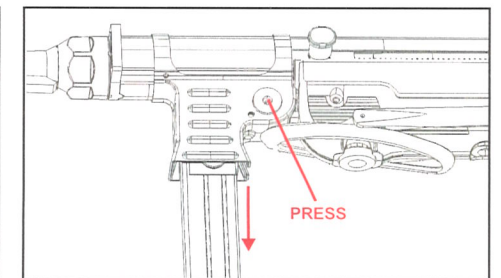


按下彈匣釋放鈕以取下彈匣
Press the magazine release button to release the magazine




摺疊槍托操作 FOLDING STOCK OPERATION

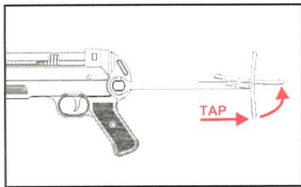

輕拍槍托底板底部並旋轉
Tap the end of stock, and rotate the stock.

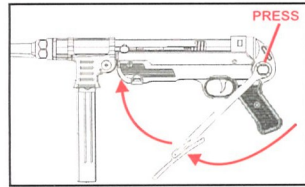


按下槍托釋放鈕並旋轉槍托
Press the stock release button to fold the stock

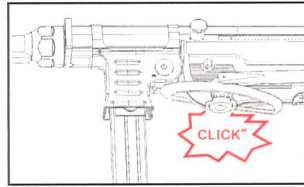


槍托到達定位會發出“咯”聲
Rotate the stock until the “Click” sound heard.


上旋器調整 HOP UP ADJUST

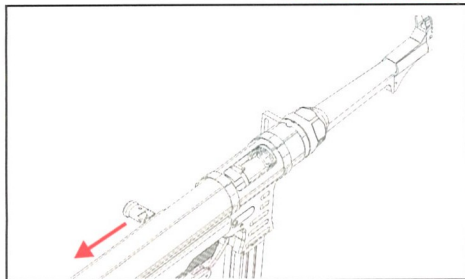

將拉柄向後拉以露出HOP UP 調整機構
Pull the charging handle, and the Hop Up chamber will appear

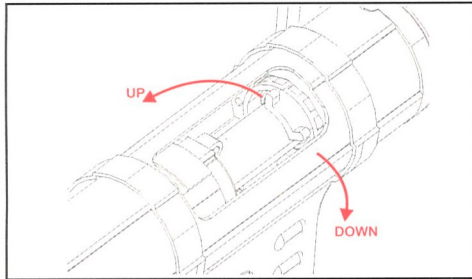


如圖調整HOP UP機構
Adjust the Hop Up as picture shows.

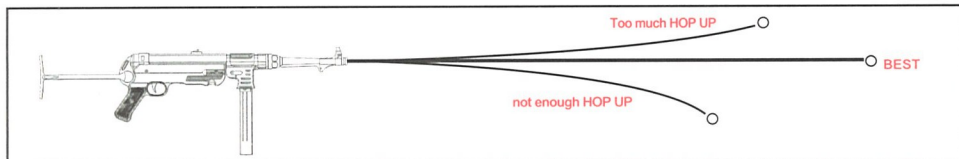


射擊幾發測試彈道並依需求調整,直到子彈呈現最佳的水平飛行狀態
Shoot a few rounds, exam the trajectory and make further adjustments, as needed. The best position is when the bullets fly horizontally and the longest flying distance is obtained

保養及卡彈清除 Maintenance and Removing Clogged BB's

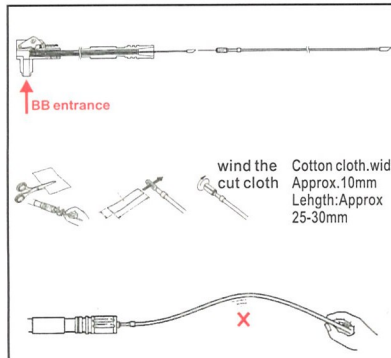

- 由BB彈入口處噴入砂油,並射擊1-2個彈匣
Drop a few drops of silicone oil into BB entrance. Insert BB's into the magazine and fire equivalent of 1 or 2 magazines.
- 如圖使用通槍條清除多餘的砂油
To complete the cleaning, use the cleaning rod (with cotton) as shown below, to remove excess oil.
將綿布如圖剪下適當尺寸並纏繞以使通槍條能順利插入槍管
Cut the cotton to the size shown. Adjust the length accordingly so that it can be inserted smoothly into the barrel.
握著通槍條本體並邊旋轉插入
Hold at the leading end of the rod and insert the rod into the barrel while turning the rod.
注意:如果握著通槍條末端將不容易插入槍管
Note: Inserting the rod will be difficult if you hold rod at the end.

卡彈排除 Removing Clogged BBs

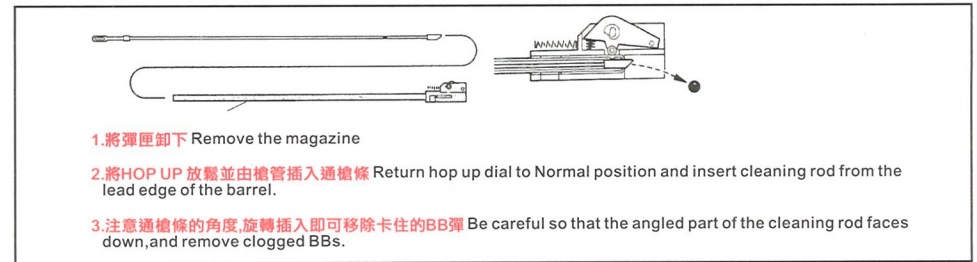

- 將彈匣卸下 Remove the magazine
- 將HOP UP 放鬆並由槍管插入通槍條 Return hop up dial to Normal position and insert cleaning rod from the lead edge of the barrel.
- 注意通槍條的角度,旋轉插入即可移除卡住的BB彈 Be careful so that the angled part of the cleaning rod faces down, and remove clogged BBs.

操作 Q&A TROUBLE SHOOTING

槍枝狀況 SYMPTOM	故障原因 CAUSE	排除方式 ACTION
不作動 No Operation At all	保險未開 Selector lever set to SAFE	將保險撥至連發或單發 Set the selector lever to AUTO or SEMI
	電池沒電 Battery is not charged	電池充電 Charge the battery
	電池接頭未接 Battery connector is disconnected	接合接頭 Connect the connector
	馬達標準壽命已到(五萬發) Expired motor life (50,000)	更換馬達 Replace the motor
	保險絲燒毀 FUSE is blown out	更換保險絲 Replace the FUSE
馬達有動作卻不能發射 Motor is revolving but gun doesn't work	齒輪故障 Faulty gear	請至專門店維修 Purchase the replacement gear from the dealer
	子彈卡在槍膛 Bullets are clogged in the chamber	使用通槍條通出子彈 Using the cleaning rod to remove the bullet
	子彈卡在彈匣 Bullets are clogged in the magazine	請輕拍彈匣,並確定使用SRC精密彈 Shake the magazine and confirm use SRC precision BBs
單發不正確 Malfunction of SEMI auto	齒輪正時未對準 Deviation in gear timing	切至連發射擊二~三秒再切至單發 Set to SEMI after firing 2-3 sec in Full AUTO
	控制桿磨損 Faulty gear lever	請至專門店維修 Purchase the replacement parts from the dealer
連發不正確 Malfunction of FULL auto	齒輪正時未對準 Deviation in gear timing	切至保險再切至連發 Set to SAFE first then set to Full auto again
	控制桿磨損 Faulty gear lever	請至專門店維修 Purchase the replacement parts from the dealer
連發速度變慢 Firing circle slow	電池即將沒電 Insufficient battery power	請充電並確認使用SRC專用電池 Charge the battery and make sure use SRC batteries
子彈飛行距離近 Shooting distance short	HOP UP沒作動 HOP UP system doesn't working	調整 HOP UP Adjust HOP UP
	Bb彈不良 Faulty BB bullets	請確定使用SRC精密彈 Please use SRC precision BBs
	O環磨損 Faulty O-ring	請至專門店維修 Purchase the replacement parts from the dealer
槍枝異音或其他 Loud or other	槍枝操作不正確 Operation doesn't correctly	請至專門店 Purchase the replacement parts from the dealer


使用前請詳細閱讀說明書
Read user's manual before use!



無論是在一般射擊或是遊戲的時候
請全程佩戴護目鏡
When shooting at a target or playing a game,
you must wear goggles or any other eye protection.



射擊外請關上保險並請勿將手指伸入護弓內碰觸板機, 避免誤擊
Never put your finger on the trigger unless you are ready to shoot. Always set the selector switch to the safe position when you are not firing the gun.

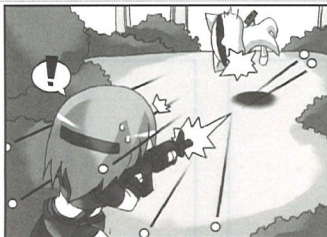

請在空曠的場地射擊或是遊戲, 以免造成危險
Please select a safe place to play!



請遠離孩童可以觸及的地方
Please keep away from children!



彈匣卸下後槍管腔內可能還有子彈 無論有沒有子彈
絕對不要向槍口窺視
BBs might remain in the barrel after the magazine
has been removed. Do not look into the muzzle!
It is extremely dangerous!



請勿對人或動物射擊或將槍口朝向標靶以外的目標
Do not aim or fire at a human or animal.



請勿嘗試分解, 改造, 改裝槍枝
Disassembling or modifying the gun
may cause serious damage to your gun.



槍枝在不使用時或是攜帶途中, 請放至於槍盒或是槍袋中
Please put the gun in a case or a carrying bag
when transporting your airsoft gun.

Maschinepistole 40 Series



GE-0641TMIII

MP 41

GE-0640TMIII

MP 40



星虹玩具有限公司

STAR RAINBOW TOYS, CO., LTD

Room D2, No36, Alley 82, Lane 422, Minzu Rd.,
Lujhou City, Taipei county 247, Taiwan

TEL: 886-2-82853848 FAX 886-2-28484622

www.starrainbow.com.tw

MADE IN TAIWAN