



Assembly of RPG-7 Gas Grenade Launcher

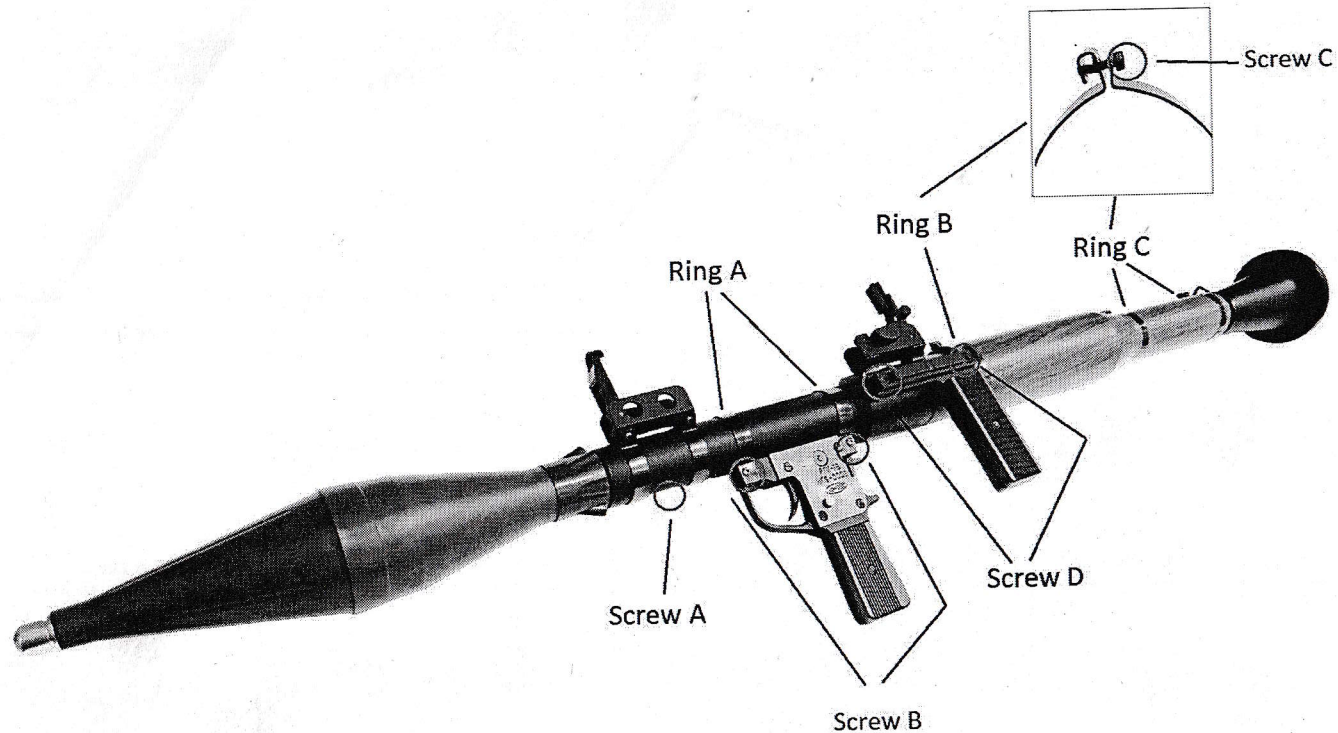


Manual for RPG-7 Gas Grenade Launcher

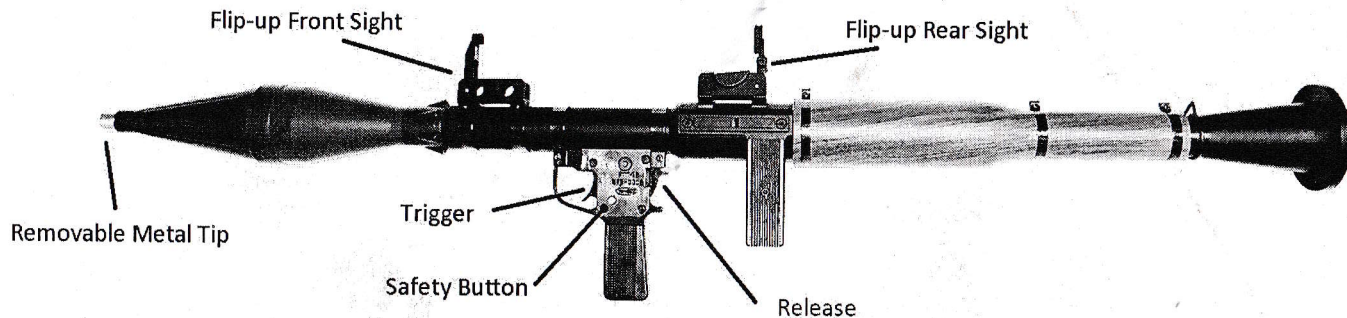


Gas BB grenade is NOT included

A

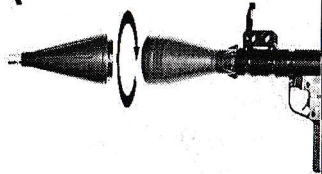


1) Open the plastic grenade head

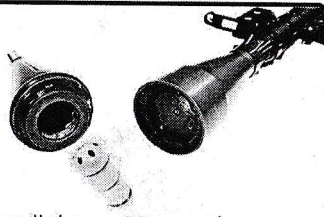

2) Install the gas BB grenade
(Low cap. is suggested)




3) Remove the metal tip

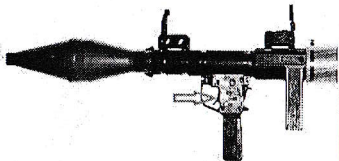

4) Pull the trigger to fire BB


B

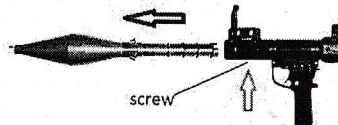


1) Remove the plastic grenade Head



2) Install the gas BB grenade

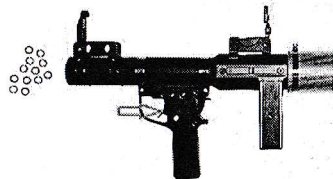

3) Pull the trigger to fire BB

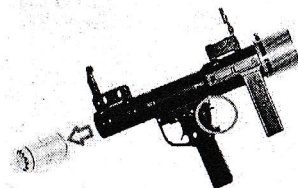

4) Remove the gas BB grenade